




USER'S MANUAL

SOFTWARE VERSION 1.0x / 2.0x
code 81646C / edition 06 - 06/09



1 • INSTALLATION

• Dimensions and cut-out: Panel mounting

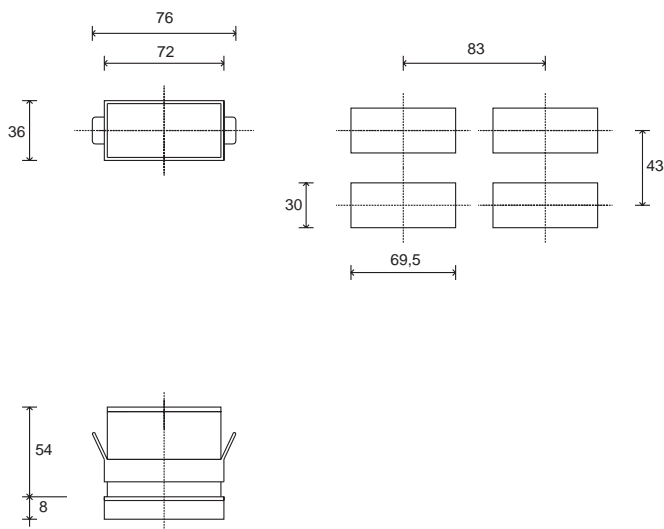

For correct and safe installation, follow the instructions and observe the warnings contained in this manual.

Panel mounting:

Fix the device with the bracket provided before making any electrical connections. To mount two or more devices side by side, use the cut-out dimensions shown above.

CE MARKING: The instrument conforms to the European Directives 2004/108/CE and 2006/95/CE with reference to the generic standards: **EN 61000-6-2** (immunity in industrial environment) **EN 61000-6-3** (emission in residential environment) **EN 61010-1** (safety).

MAINTENANCE: Repairs must be done out only by trained and specialized personnel. Cut power to the device before accessing internal parts.

Do not clean the case with hydrocarbon-based solvents (Petrol, Trichlorethylene, etc.). Use of these solvents can reduce the mechanical reliability of the device. Use a cloth dampened in ethyl alcohol or water to clean the external plastic case.

SERVICE: GEF 40T 72 has a service department. The warranty excludes defects caused by any use not conforming to these instructions.

2 • TECHNICAL SPECIFICATIONS

Display	2, 3, 4 digit red LED's, digit height 14mm
Keys	3 mechanical keys (Raise, Lower, F)
Accuracy	0.2% f.s. at 25°C ambient temperature, ts=120msec
Resolution (function of settable sample time)	120msec, >13bit - 8000 points 60msec, >13bit - 8000 points (only for linear inputs) 30msec, >12bit - 4000 points (only for linear inputs) 15msec, >11bit - 2000 points (only for linear inputs)
Main input	TC, RTD, PTC, NTC 60mV, 1V, Ri ≥ 500KΩ; 5V, 10V, Ri ≥ 20KΩ 20mA, Ri = 50Ω adjustable digital filter
Thermocouples	J, K, R, S, T, B, E, N (IEC 584-1, CEI EN 60584-1, 60584-2) L GOST, U, G, D, C Custom linearization available on request
Cold junction error	0,1° / °C
RTD type (scale configurable within indicated range, with or without decimal point)	DIN 43760 (PT100), JPT100
Max. RTD line resistance	20Ω
PTC type / NTC type	990Ω, 25°C / 1KΩ, 25°C
Max. non-linearity error	See t.P parameter at page 4
°C / °F selection	Faceplate configurable
Linear scale ranges	-1999 to 9999 (with 4 digit display) -999 to 999 (with 3 digit display) -99 to 99 (with 2 digit display) Configurable decimal point position, possible 32 segment linearization
Logic input (option)	Ri = 5,6KΩ (24V, 4mA), isolated to 1500V
Function of logic input	configurable to reset memory latch, hold, flash, zero, select max./ min. peak, peak-peak value
Alarms (set points)	Maximum of three configurable alarms: absolute, deviation, symmetrical deviation. Adjustable hysteresis
Alarm masking	- exclude on power-up - latch reset from key and/or external contact - insert delay filter (DON, DBI, DOF, DPO) - set minimum intervention time
Relay contact	NO (NC) 5A, 250V
Logic output	power supply: > 18Vac/dc, Rout = 560Ω (6V/20mA)
Triac output (option)	20...240Vac ±10%, 2A max. Snubberless, inductive and resistive load (It = 128A's)
Fault settings	Alarm states can be configured in probe fault condition
2-wire Transmitter Power Supply (option)	18V ±10%, 50mA 1,2Vdc for potentiometer > 100Ω
Analog retransmission (option)	4 to 20mA, max. 60Ω load
Power supply (switching)	11...27Vdc, 18...27Vac ±10%, 50/60Hz, 4,5VA (not isolated)
Faceplate protection	IP65
Working / Storage temperatures	0 to 50°C / -20 to 70°C
Relative humidity	20 to 85%, non-condensing
Installation	Panel mounting
Weight	110g for the complete version

EMC conformity has been tested with the following connections

FUNCTION	CABLE	LENGTH USED
TC input probe	0,8 mm ² compensated	5 mt
"PT100" input probe	1 mm ²	3 mt
Power supply cable	1 mm ²	1 mt
Relay output cables	1 mm ²	3,5 mt


3 • DESCRIPTION OF FACEPLATE

PV display: Indication of process variable
 •• Indication of 'HI' or 'Lo' out of range
 •• Indication of open circuit (br) or short circuit (Er)
 •• Display of configuration and calibration messages

Indication of output states:
 OUT 1 (Alarm 1); OUT 2 (Alarm 2);
 OUT 3 (Alarm 3)

Label with engineering units



Function key:
 Gives access to different configuration stages ••
 Confirms any parameter changes

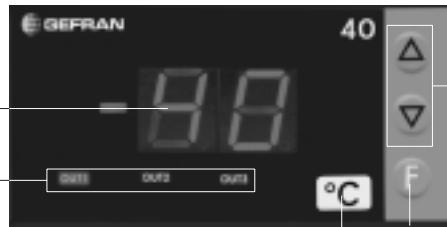


"Raise" and "Lower" keys:
 These keys are used for any operation that requires a numerical parameter to be raised or lowered. ••The speed of change is proportional to the time the key is pressed. •• The operation is not cyclic: once the maximum (minimum) limit is reached, there will be no further increase (decrease) of the value, even if the key remains pressed.
 The keys can be configured to perform reset, hold, display of the peak value, etc. as determined by the 't.U.' and 't.d.' parameters on the 'In' menu.

4 • CONNECTIONS


• Logic input / Retransmission output / Relay output

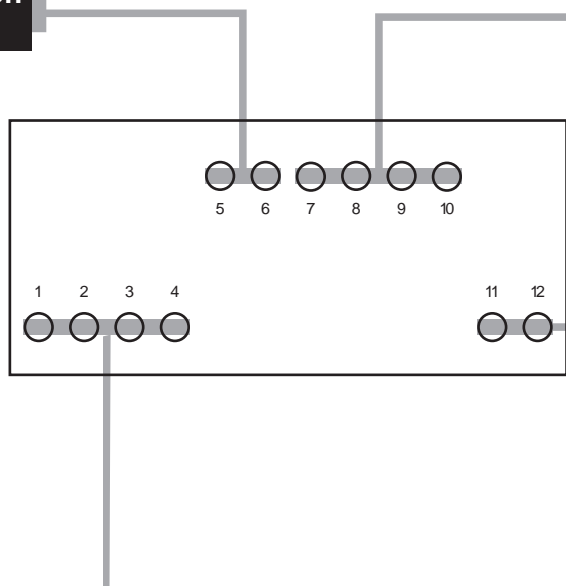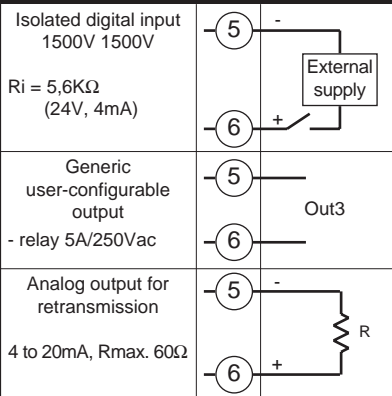

• Outputs

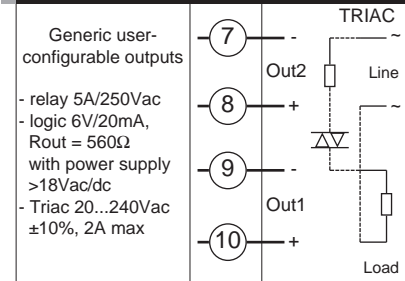

• Power supply

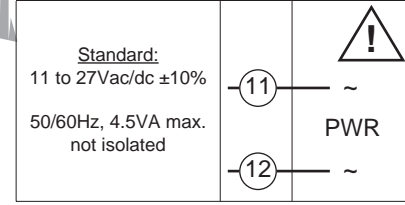


• Inputs

• Linear input for potentiometer 	• Linear input with 2-wire transmitter 	• TC Available thermocouples: J, K, R, S, T, B, E, N, L, U, G, D, C - Respect polarities - For extensions, use compensated cable appropriate for thermocouple.
• Pt100 / PTC / NTC Use wires of adequate thickness (min. 1mm²) PT100, JPT100, PTC. 	• Linear input (I) dc current linear input 20mA, Ri = 50Ω (signal must be isolated from power supply) 	• Linear input (V) dc voltage linear input 60mV, 1V, 5V, 10V, Ri ≥ 500KΩ (signal must be isolated from power supply)


• Device structure: identification of boards

CPU board 	<table border="1"> <tr> <td>RTD, PTC, NTC input</td> <td>Transmitter and potentiometer power supply</td> </tr> <tr> <td>S3</td> <td>OFF</td> </tr> <tr> <td>S4</td> <td>ON</td> </tr> </table>	RTD, PTC, NTC input	Transmitter and potentiometer power supply	S3	OFF	S4	ON	OUTPUT board 	<table border="1"> <tr> <th colspan="2">Probe power supply</th> </tr> <tr> <th>Voltage</th> <th>Jumpers</th> </tr> <tr> <td>1V</td> <td>S4 - S6B - S7A</td> </tr> <tr> <td>24V (18V)</td> <td>S6B - S7A</td> </tr> </table> <p>S5 = Status of Out 1 relay S8 = Status of Out 2 relay S9 = Status of Out 2 relay A = Direct B = Inverse</p>	Probe power supply		Voltage	Jumpers	1V	S4 - S6B - S7A	24V (18V)	S6B - S7A
RTD, PTC, NTC input	Transmitter and potentiometer power supply																
S3	OFF																
S4	ON																
Probe power supply																	
Voltage	Jumpers																
1V	S4 - S6B - S7A																
24V (18V)	S6B - S7A																


5 • PROGRAMMING and CONFIGURATION

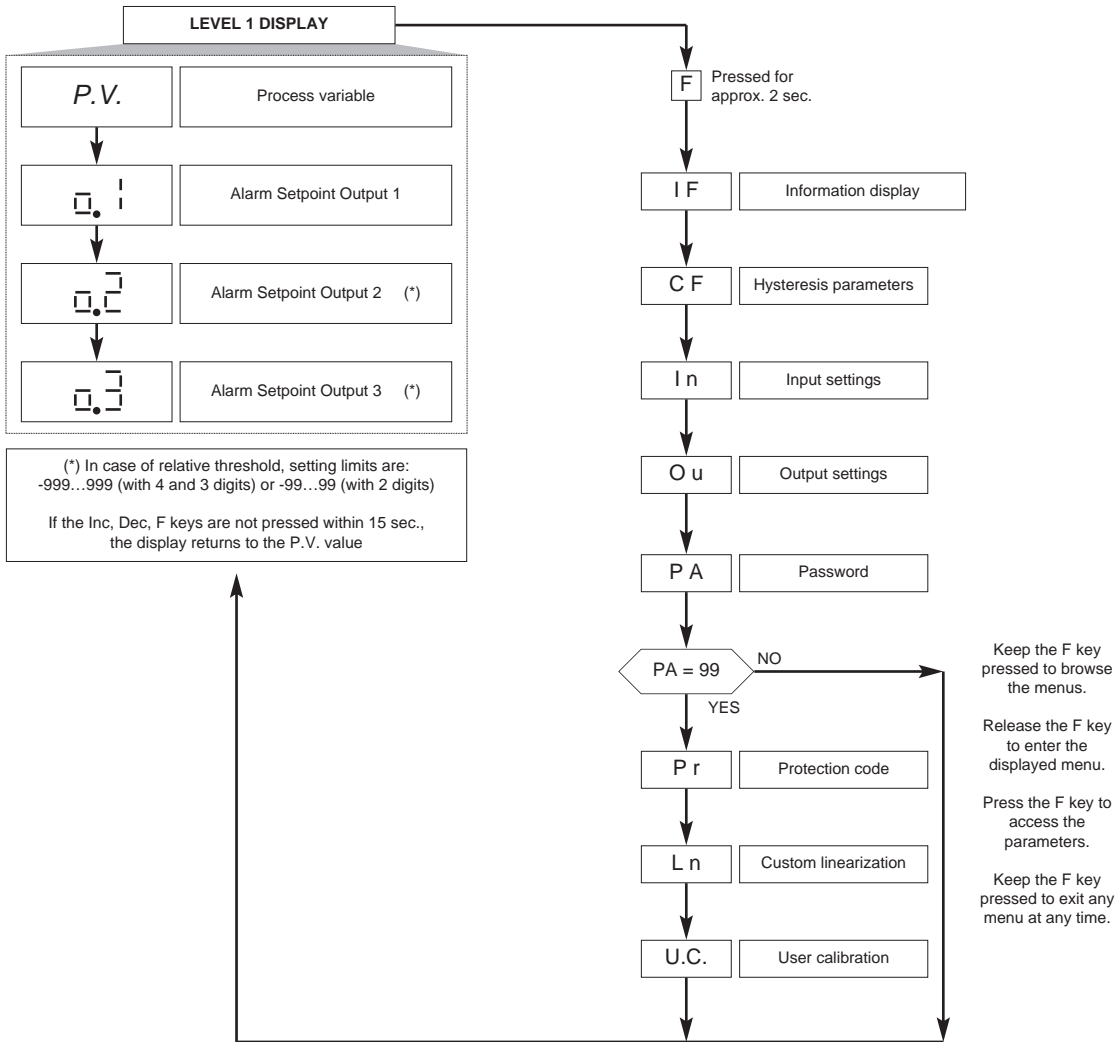


• Information display

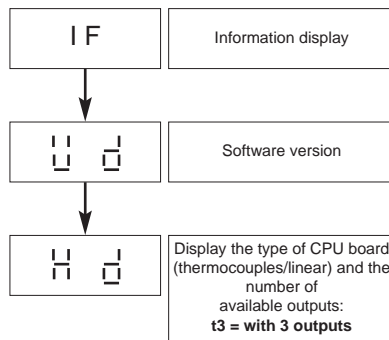

• Configuration parameters

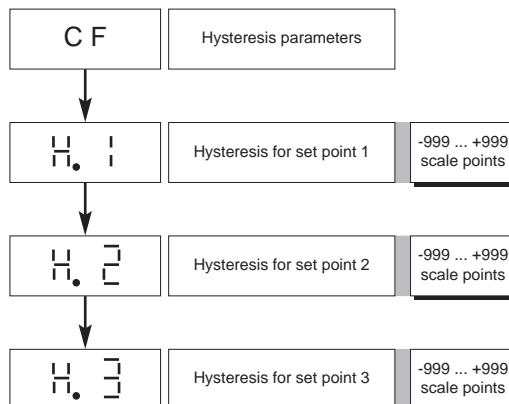





• TC/LIN input parameters

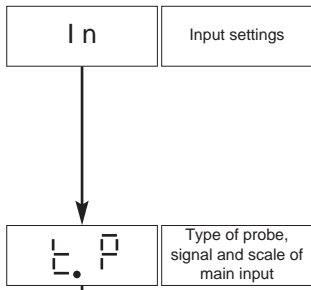


Typ	TYPE PROBE	4 DIGIT		3 DIGIT +sign		2 DIGIT +segno	
		without dec. point	with dec. point	without dec. point	with dec. point	without dec. point	with dec. point
Probe: TC							
0	TC J °C	0/1000	0.0/999.9	0/999	0.0/99.9	0/99	not available
1	TC J °F	32/1832	32.0/999.9	32/999	32.0/99.9	32/99	not available
2	TC K °C	0/1300	0.0/999.9	0/999	0.0/99.9	0/99	not available
3	TC K °F	32/2372	32.0/999.9	32/999	32.0/99.9	32/99	not available
4	TC R °C	0/1750	0.0/999.9	0/999	0.0/99.9	0/99	not available
5	TC R °F	32/3182	32.0/999.9	32/999	32.0/99.9	32/99	not available
6	TC S °C	0/1750	0.0/999.9	0/999	0.0/99.9	0/99	not available
7	TC S °F	32/3182	32.0/999.9	32/999	32.0/99.9	32/99	not available
8	TC T °C	-200/400	-199.9/400.0	-200/400	-99.9/99.9	-99/99	not available
9	TC T °F	-328/752	-199.9/752.0	-328/752	-99.9/99.9	-99/99	not available
10	TC B °C	44/1800	44.0/999.9	not available	not available	not available	not available
11	TC B °F	111/3272	111.0/999.9	not available	not available	not available	not available
12	TC E °C	-100/750	-100.0/750.0	-100/750	not available	not available	not available
13	TC E °F	-148/1382	-148.0/999.9	-148/999	not available	not available	not available
14	TC N °C	0/1300	0.0/999.9	0/999	not available	non dsip.	not available
15	TC N °F	32/2372	32.0/999.9	32/999	not available	not available	not available
16	TC L °C	0/600	0.0/600.0	0/600	0.0/99.9	0/99	not available
17	TC L °F	32/1112	32.0/999.9	32/999	32.0/99.9	32/99	not available
18	TC U °C	-200/400	-199.9/400.0	-200/400	-99.9/99.9	-99/99	not available
19	TC U °F	-328/752	-199.9/752.0	-328/752	-99.9/99.9	-99/99	not available
20	TC G °C	0/2300	0.0/999.9	0/999	not available	not available	not available
21	TC G °F	32/4172	32.0/999.9	32/999	not available	not available	not available
22	TC D °C	0/2300	0.0/999.9	0/999	not available	not available	not available
23	TC D °F	32/4172	32.0/999.9	32/999	not available	not available	not available
24	TC C °C	0/2300	0.0/999.9	0/999	not available	not available	not available
25	TC C °F	32/4172	32.0/999.9	32/999	not available	not available	not available
26	TC °C	Custom	Custom	Custom	Custom	Custom	not available
27	TC °F	Custom	Custom	Custom	Custom	Custom	not available
Probe: RTD							
28	PT100 °C	-200/600	-199.9/600.0	-200/600	-99.9/99.9	-99/99	not available
29	PT100 °F	-328/1112	-199.9/999.9	-328/999	-99.9/99.9	-99/99	not available
30	JPT100 °C	-200/600	-199.9/600.0	-200/600	-99.9/99.9	-99/99	not available
31	JPT100 °F	-328/1112	-199.9/999.9	-328/999	-99.9/99.9	-99/99	not available
Probe: PTC - NTC							
32	PTC °C	-55/120	-55.0/120.0	-55/120	-55.0/99.9	-55/99	not available
33	PTC °F	-67/248	-67.0/248.0	-67/248	-67.0/99.9	-67/99	not available
34	NTC °C	-10/70	-10.0/70.0	-10/70	-10.0/70.0	-10/70	not available
35	NTC °F	14/158	14.0/158.0	14/158	14.0/99.9	14/99	not available
Probe: Voltage + Current							
36	0...60mV	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
37	0...60mV	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
38	12...60mV	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
39	12...60mV	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
40	0...20mA	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
41	0...20mA	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
42	4...20mA	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
43	4...20mA	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
44	0...10V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
45	0...10V	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
46	2...10V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
47	2...10V	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
48	0...5V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
49	0...5V	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
50	1...5V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
51	1...5V	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
52	0...1V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
53	0...1V	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
54	200mV...1V	-1999/9999	-199.9/999.9	-999/999	-99.9/99.9	-99/99	-9.9/9.9
55	200mV...1V	linear custom	linear custom	linear custom	linear custom	linear custom	linear custom
Probe: Custom PT100 - PTC - NTC							
56	PT100	custom	custom	custom	custom	custom	custom
57	JPT	custom	custom	custom	custom	custom	custom
58	NTC	custom	custom	custom	custom	custom	custom

In case of non-availability, maximum and minimum limits are set to 0.
 In case of custom linearization, test limits for setting LO and HI errors are given by the calibration values.
 If these limits are not exceeded, they are taken into consideration as limits LO_S and HI_S.

<p>Max. non-linearity error for thermocouples (TC), resistors (PT100) and thermistors (PTC, NTC).</p> <p>The error is calculated as deviation from theoretical value and is expressed as percentage of full scale (in °C).</p>	S, R range 0...1750°C; error < 0.2% f.s. (t > 300°C) / for other range; error < 0.5% f.s.
	T error < 0.2% f.s. (t > -150°C)
	B range 44...1800°C; error < 0.5% f.s. (t > 300°C) / range 44.0...999.9; error < 1% f.s. (t > 300°C)
	U range -99.9...99.9 and -99...99°C; error < 0.5% f.s. / for other range; error < 0.2% f.s. (t > -150°C)
	D error < 0.2% f.s. (t > 200°C)
	C range 0...2300; error < 0.2% f.s. / for other range; error < 0.5% f.s.
	NTC error < 0.5% f.s.
	Tc: J, K, E, N, L error < 0.2% f.s.
	PT100, JPT100 and PTC error < 0.2% f.s.

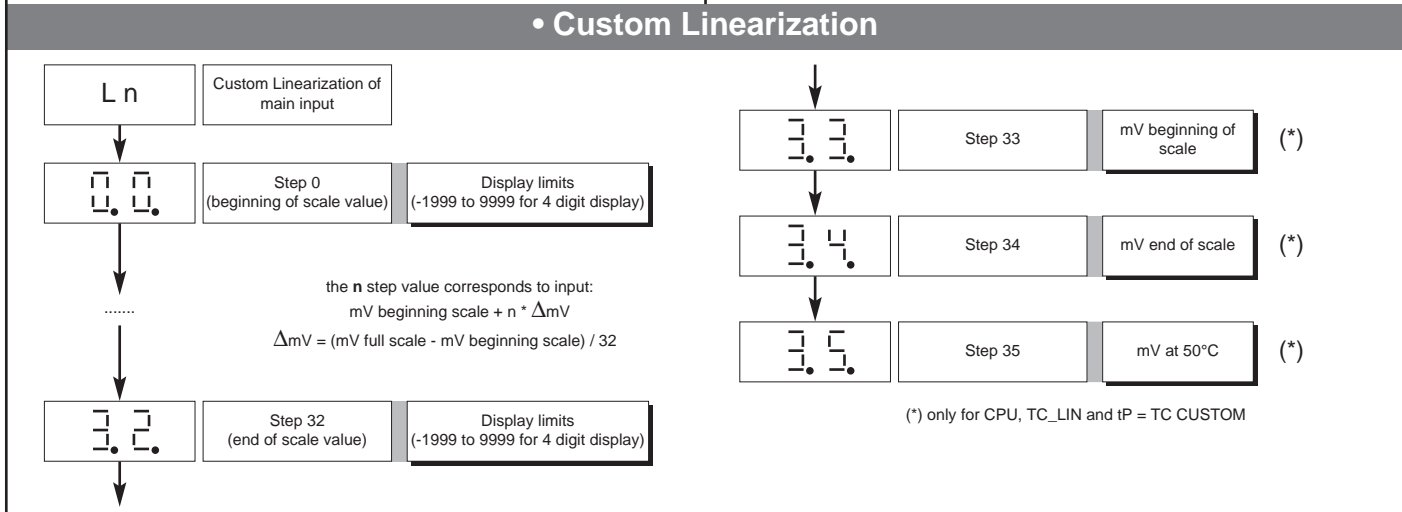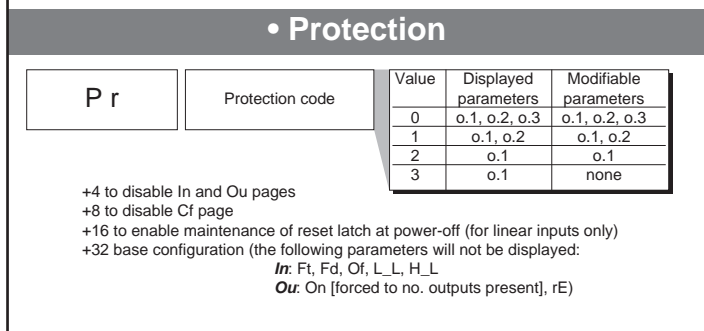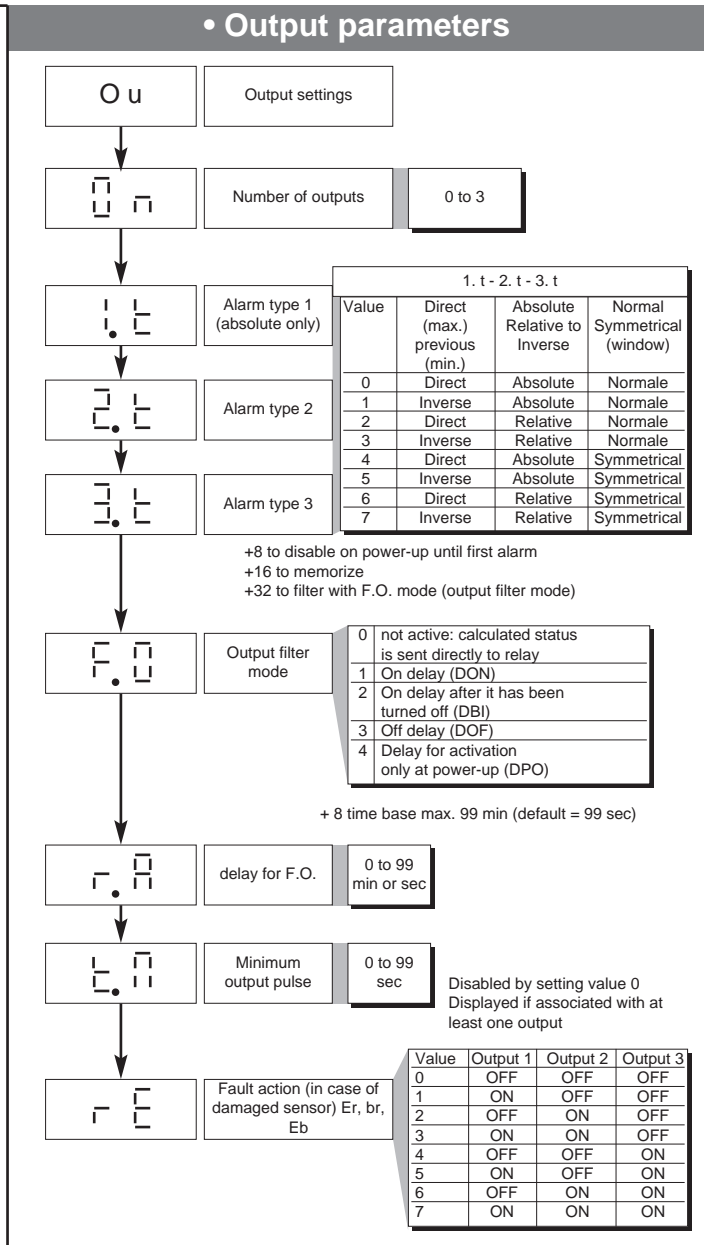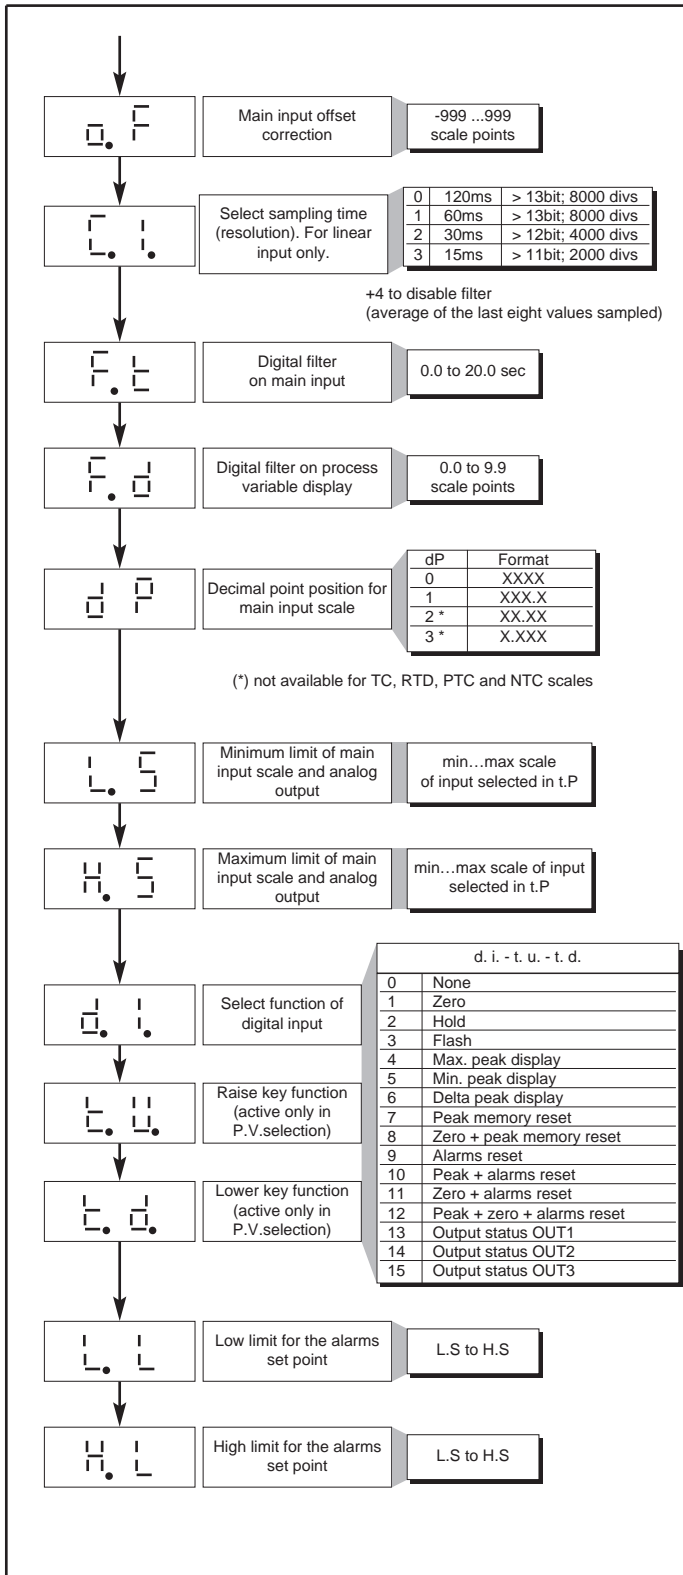

• User Calibration

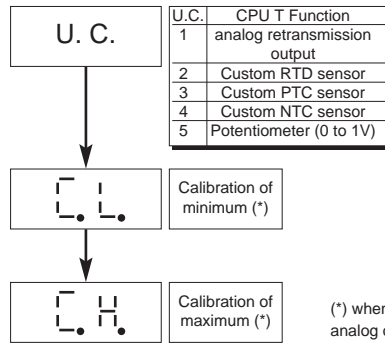

(*) when U.C. = 1 press keys $\Delta \nabla$ to calibrate analog output


• HOLD function

The input value and alarms are frozen while the logic input is closed.
With logic input closed, a reset turns OFF both the relay outputs and the alarms latch.


• FLASH function

Input value is sampled; state of alarms is not transferred to outputs; outputs are "frozen".
When the logic input is active the input value is "frozen" and the outputs are updated according to the calculated alarms state, including the ones latched.


6 • ALARMS

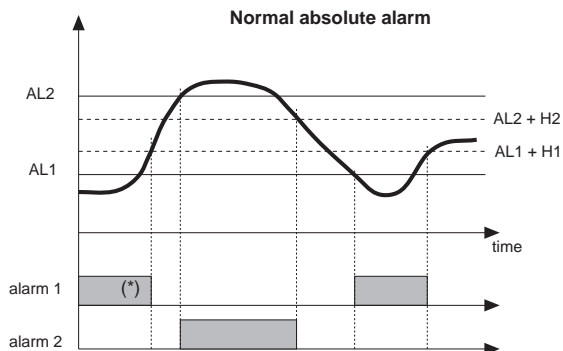


For AL1 inverse absolute alarm (min.) with positive H1, 1 t = 1
(*) = OFF if disabling on power-on exists
For AL2 direct absolute alarm (max) with negative H2, 2 t = 0

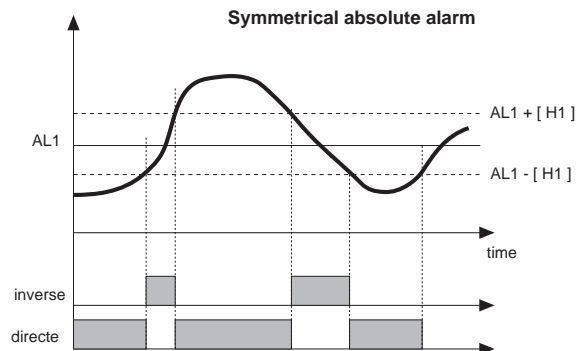

For AL1 inverse absolute, symmetrical alarm with hysteresis H1, 1 t = 5
For AL1 direct absolute, symmetrical alarm with hysteresis H1, 1 t = 4

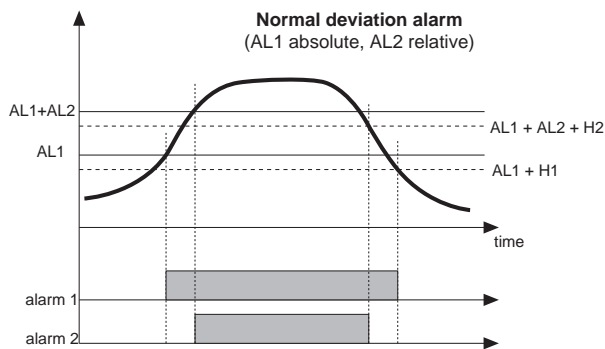





For AL1 direct absolute alarm (max) with negative H 1, 1 t = 0
For AL2 direct relative alarm (max) with negative H2, 2 t = 2

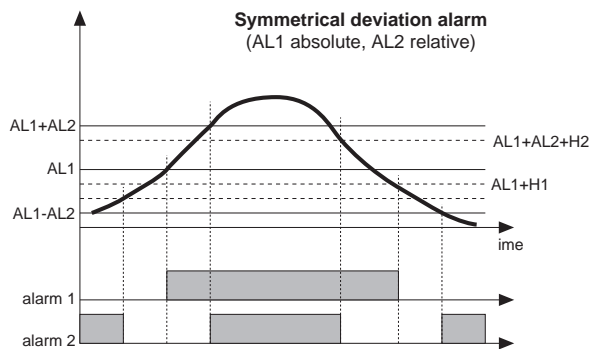

For AL1 direct absolute alarm (max) with negative H1, 1 t = 0
For AL2 symmetrical deviation alarm H2, 2 t = 6

• Filter - outputs with reference to parameters F.0 and r.A

The diagrams refer to a normal absolute alarm with hysteresis $H = 0$

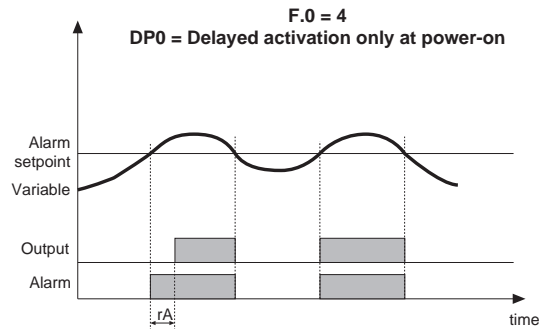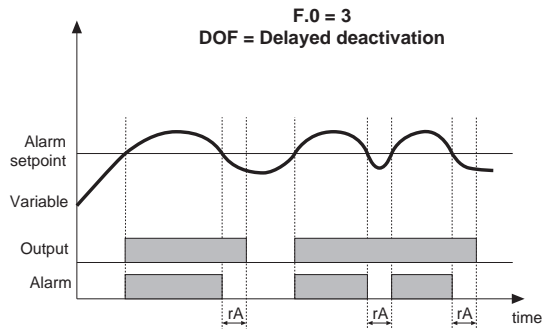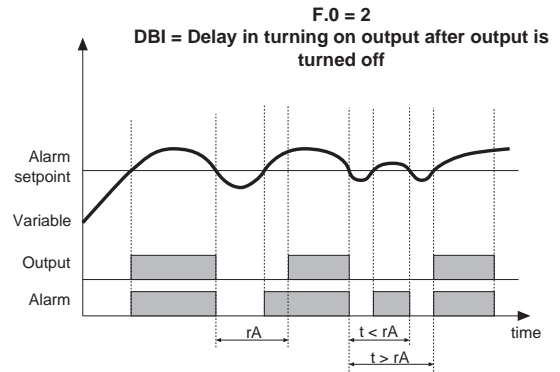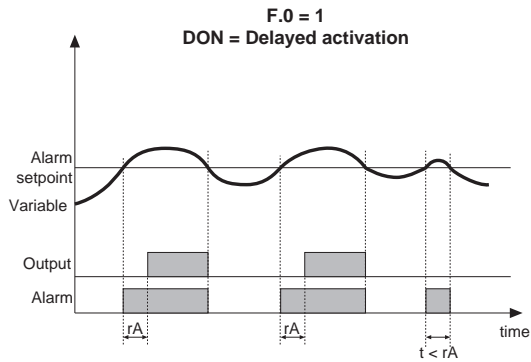

7 • ACCESSORIES

• Transformer



TRAF0 1

TRAF0 5

Size

TRAF0 1: L: 44,5mm,
B: 46,2mm,
H: 32,5mm

TRAF0 5: L: 51,5mm,
B: 52,5mm,
H: 35mm

• ORDER CODE

TRAF0 1	3VA, 230/24Vac transformer
TRAF0 5	10VA, 230/24Vac transformer

Conform to VDE 0551, EN 60742, CE

• RS323 interface cable for configuration




N.B.:
the PC configuration cable is supplied with the programming software.
WARNING: make the connection with the device powered and with inputs and outputs disconnected.

• ORDER CODE

WSK-0-0-0	Interface cables + CD Winstrum
-----------	--------------------------------

• PTC / NTC

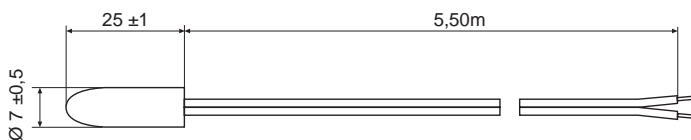

TECHNICAL DATA

Mod. probe: Ambient probe
Cap material: Plastic (Ø 7 x 25mm)
Temperature range: -20...80°C
PTC: R 25°C = 1KΩ ±1% (KTY 81-110)
Response time: 20sec (in still air)
Isolation: 100MΩ, 500Vd.c. between cap and terminals
Wire material: Unipolar in PVC (12/0,18)
Wire length: 5,50m

• ORDER CODE

PTC 7 x 25 5m
NTC

• Installation notes

Always power the devices by means of the TRAF01 transformers specified in the manual (one for each device) when:

- The application is unknown
- Multiple devices have input signals that are not isolated from one another, such as, for example: non-isolated grounded thermocouples, transducers or transmitters powered by a single supply, linear inputs with voltage or current not isolated from one another.
- It is a general rule that devices with shared signals (probes, transmitters, signal retransmission, etc.) must be powered by a separate transformer for each device.
- Any special cases not covered by the above example must be evaluated from time to time.
- One possible example of a power supply by a single transformer is the case of devices with RTD or PTC probes, with relay or logic outputs connected to individually isolated devices (such as GTS static groups).

ATTENTION: in case of an input with a NON-isolated grounded thermocouple, the secondary of the power transformer for the device CANNOT be grounded: doing so will cause the device to fail, with probable blowing of the internal fuse.

ORDER CODE

40T 72 9

N° Digits	
2 + sign	2
3 + sign	3
4	4

Sensor power supply	
None	0 0
For T input (alternative to RTD, PTC, NTC)	
1,2Vdc for potentiometer (*)	0 1
18Vdc, 50mA for 2-wire transmitter	2 4

Power supply	
9	11 to 27Vdc, 18...27Vac not isolated

Digital input / Retransmission output / Output 3	
0 0	None
0 1	Digital input
0 2	Retransmission 4 to 20mA on max 60Ω
R 0	Relay

Output 1, Output 2	
R R	Relay, Relay
R D	Relay, Static D2
T 0	Triac, None (for 96 format only)

For input from potentiometer, request version R77 (R input > 10MΩ)

Kindly contact GEFTRAN for information on available codes.

• WARNINGS



WARNING: this symbol indicates danger. It is seen near the power supply circuit and near high-voltage relay contacts.

Read the following warnings before installing, connecting or using the device:

- follow instructions precisely when connecting the device.
- always use cables that are suitable for the voltage and current levels indicated in the technical specifications.
- the device has no ON/OFF switch: it switches on immediately when power is turned on. For safety reasons, devices permanently connected to the power supply require a two-phase disconnecting switch with proper marking. Such switch must be located near the device and must be easily reachable by the user. A single switch can control several units.
- if the device is connected to electrically NON-ISOLATED equipment (e.g. thermocouples), a grounding wire must be applied to assure that this connection is not made directly through the machine structure.
- if the device is used in applications where there is risk of injury to persons and/or damage to machines or materials, it MUST be used with auxiliary alarm units. You should be able to check the correct operation of such units during normal operation of the device.
- before using the device, the user must check that all device parameters are correctly set in order to avoid injury to persons and/or damage to property.
- the device must NOT be used in inflammable or explosive environments. It may be connected to units operating in such environments only by means of suitable interfaces in conformity to local safety regulations.
- the device contains components that are sensitive to static electrical discharges. Therefore, take appropriate precautions when handling electronic circuit boards in order to prevent permanent damage to these components.

Installation: installation category II, pollution level 2, double isolation

- power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label.
- install the instrumentation separately from the relays and power switching devices
- do not install high-power remote switches, contactors, relays, thyristor power units (particularly if "phase angle" type), motors, etc... in the same cabinet.
- avoid dust, humidity, corrosive gases and heat sources.
- do not close the ventilation holes; working temperature must be in the range of 0...50°C.

If the device has faston terminals, they must be protected and isolated; if the device has screw terminals, wires should be attached at least in pairs.

- **Power:** supplied from a disconnecting switch with fuse for the device section; path of wires from switch to devices should be as straight as possible; the same supply should not be used to power relays, contactors, solenoid valves, etc.; if the voltage waveform is strongly distorted by thyristor switching units or by electric motors, it is recommended that an isolation transformer be used only for the devices, connecting the screen to ground; it is important for the electrical system to have a good ground connection; voltage between neutral and ground must not exceed 1V and resistance must be less than 60Ω; if the supply voltage is highly variable, use a voltage stabilizer for the device; use line filters in the vicinity of high frequency generators or arc welders; power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label.

- **Input and output connections:** external connected circuits must have double insulation; to connect analog inputs (TC, RTD) you have to: physically separate input wiring from power supply wiring, from output wiring, and from power connections; use twisted and screened cables, with screen connected to ground at only one point; to connect adjustment and alarm outputs (contactors, solenoid valves, motors, fans, etc.), install RC groups (resistor and capacitor in series) in parallel with inductive loads that work in AC (*Note: all capacitors must conform to VDE standards (class x2) and support at least 220 VAC. Resistors must be at least 2W*); fit a 1N4007 diode in parallel with the coil of inductive loads that operate in DC.

GEFRAN spa will not be held liable for any injury to persons and/or damage to property deriving from tampering, from any incorrect or erroneous use, or from any use not conforming to the device specifications.